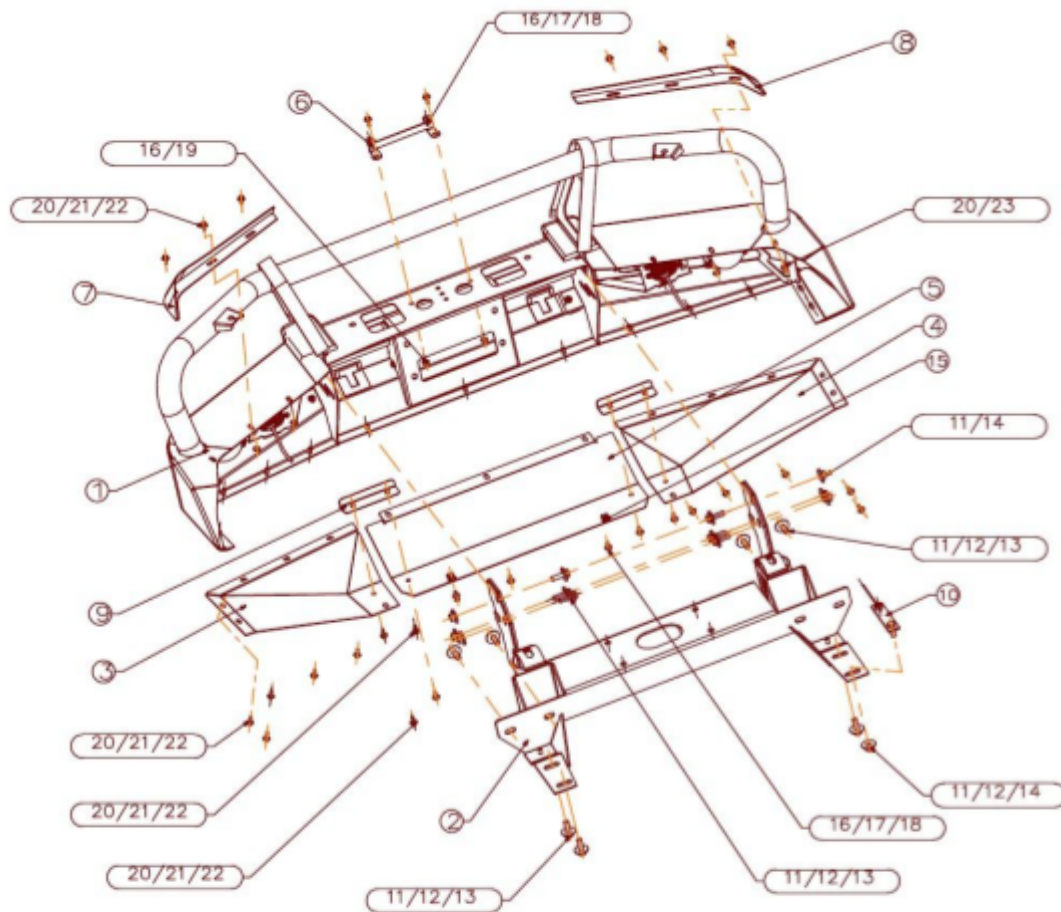


Fitting Instruction

Description:	ELITE BULL BAR To Suit 2015-2020 NISSAN NAVARA
Model:	Navara/2015
Item NO.:	BBRA-NP300



Fitting instruction



Note: PLEASE READ BEFORE ATTEMPTING INSTALLATION.

- All Rockarmor products are manufactured to highest of standards and latest finishes including sand blasting all raw material and e coating to clear the product of any impurities and finished with a tiger coat to keep the longevity if at any stage while off road or on road use this product is damaged or scratched have the damaged surface repaired.
- This product and its fixings must not be modified in any way unless stated in this fitting instruction.
- Do not remove labels from this product.
- Do not use this product for any vehicle other than specified in these instructions.
- It is the installer's responsibility to assure this product is installed correctly allowing enough tolerance for movement between the chassis and body and clearance of all components.
- Use Loctite on all nuts and bolts.
- The installation of this product may require the use of specialized tools and or trained fitter.

For more information regarding this product please visit www.Rockarmor.com.au



Fitting Instruction

The following tools will be required to install the product.

Metric Socket Set 10-18MM.

Socket Extension Bar

Metric Spanner Set 10-18MM.

Torx Drivers T25-T30

Trim Removal Tool

Screwdriver Set (Flat and Phillips head)

Utility Knife

Side Cutters

Pliers

Impact Drill

Loctite

Cable Ties

Masking Tape

Satin Black Automotive Paint

Grease and wax Remover







Scotch Brite or Fine sandpaper

Standard locking torque

M6 - 11Nm | M8 - 18Nm | M10 - 80 Nm | M12 - 90 Nm | M16 - 90 Nm

Fitting instruction

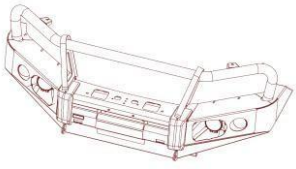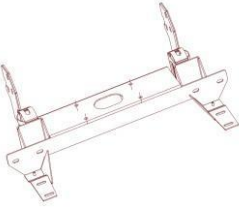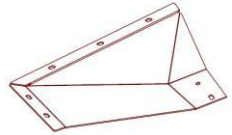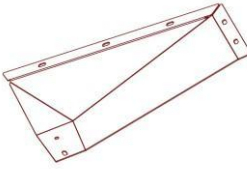Material list

Item	item NO.	Description	Qty	Item	item NO.	Description	Qty
1	R280005489	 Bull bar assemble	1	2	R280005651	 Winch Frame	1
3	R280005655	 Skid Plate (LH)	1	4	R280005659	 Skid Plate (RH)	1
5	R280005654	 Middle Skid Plate	1	6	200089450	 Bracket	1
7	200146213	 Decorating plate (LH)	1	8	200146214	 Decorating plate (RH)	1
9	R280005656	 Mounting bracket	2	10	R280006733	 T-bolt	1
Hardware kit							
Item	Item NO.	Description					Qty



Fitting Instruction

11	3000253	Washer D12(12x37x3mm)	20
12	3000172	Spring washer D12	14
13	3002826	Hexagonal head bolt M12_40	13
14	3001504	Hexagon nut M12	7
15	E280001605	Nut M6	2
16	3000222	Washer D6 (6x18x1.6mm)	6
17	3000136	Spring washer D6	4
18	3002529	Hexagonal head bolt M6_25	4
19	3001569	Hexagon flange nuts M6	2
20	3000225	Washer D6 (6x18x1.6mm)	31
21	3000137	Spring Washer D6	25
22	3002518	Hexagonal head bolt M6_20	25
23	3001470	Hexagon nut M6	6
24	3000276	Flat washer D4(4X8.65X0.8MM)	8
25	3003934	Cross recessed pan head tapping screw ST4-12	8

Installation Steps:

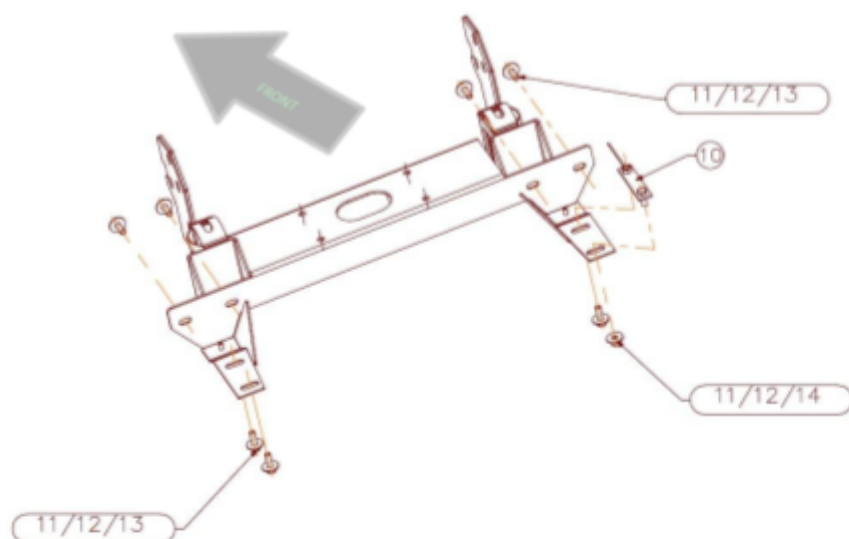
Fitting instruction

1. REMOVE FACTORY BUMPER AS SHOWN BELOW (IT IS RECOMMENDED TO PAINT UNDER THE HEADLIGHT)



Fitting Instruction

2. Install winch frame—item 2



use below bolt kits: INSTALL FIRST

1. Item 10, T-bolt (1 set)



2. Item 11/12/13, (seven sets)

Washer D12/Spring washer M12/
hexagonal head bolt M12_40



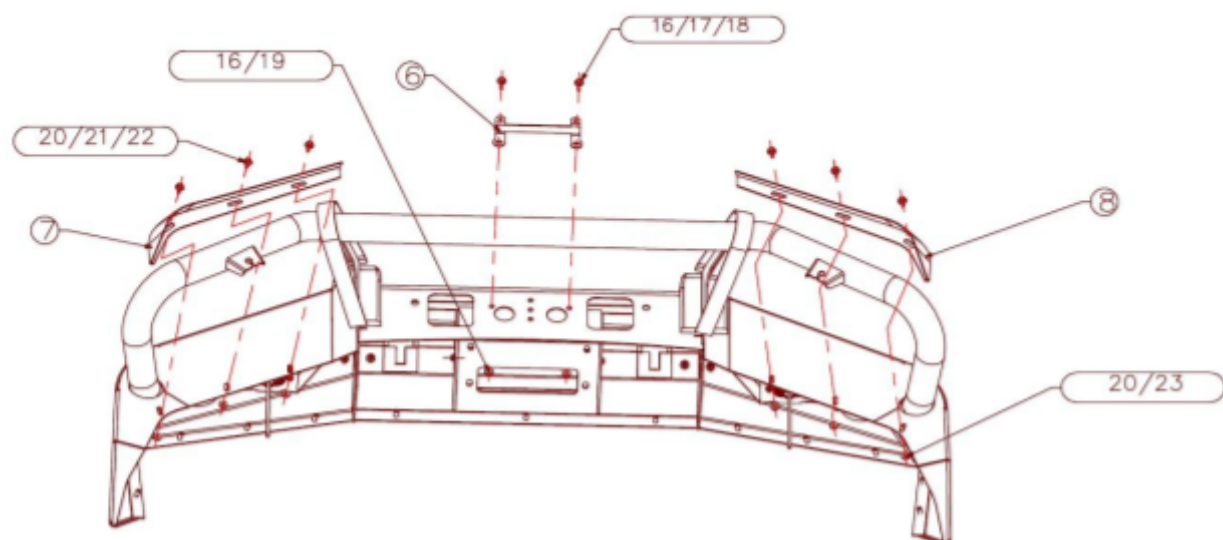
3. Item 11/12/14, (1set)

Washer D12/Spring WasherM12/ Hexagon nut
M12



3. Install item 6 & 7 & 8

Fitting instruction



(_) use below bolt kits:

└ Item 16/17/18/19: (2sets)

hexagonal head bolt M6_25/ M6 spring washer/M6 washer/M6 flange nut



Fitting Instruction instruction

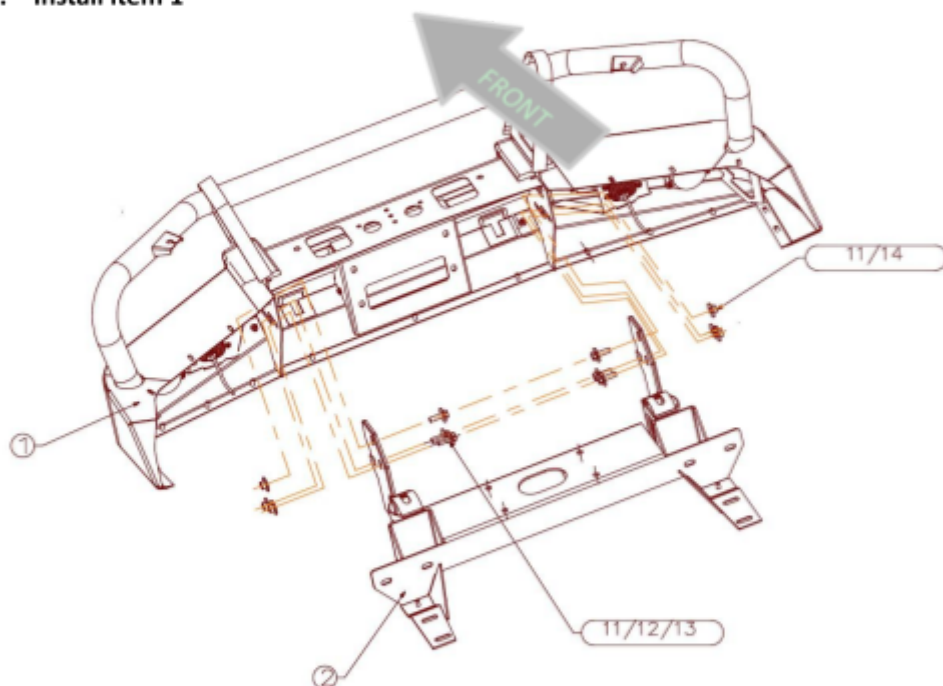
(二) use below bolt kits:

1 Item 20/21/22/23: (6sets)

hexagonal head bolt M6_25/ M6 spring washer/M6washer /M6 flange nut



4. Install item 1



use below bolt kits:

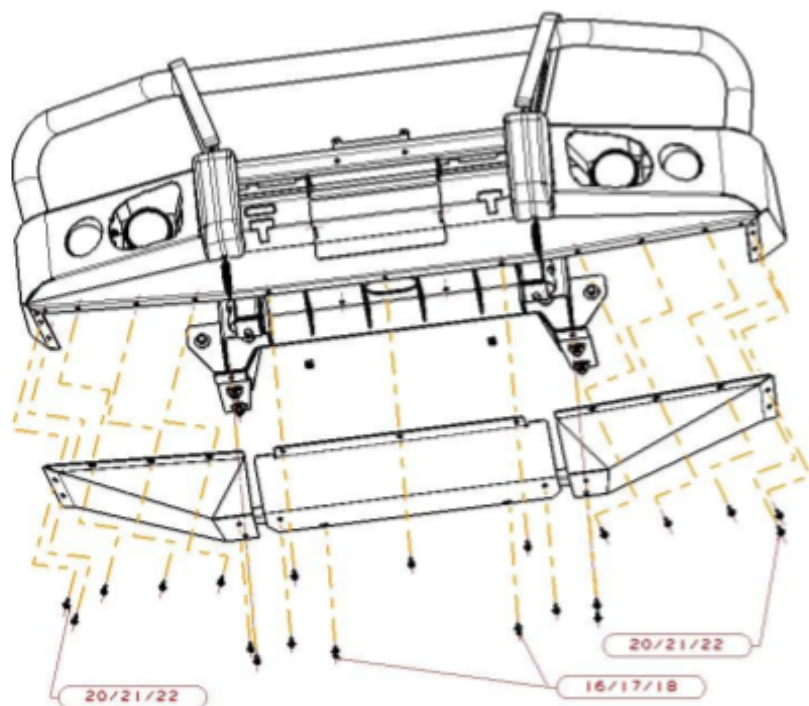
1 Item 11/12/13/14: (6sets)

Washer D12/spring washer D12/M12_40/ Hexagon nut M12



Fitting instruction

5. Install item 3 & 4 & 5



Need use below bolt kits:

1 Item 20/21/22 : (14sets)

Washer D6/spring washerD6/
hexagonal head bolt M6_25



Need use below bolt kits:

2 Item 16/17/18 : (2sets)

Washer D6/spring washer D6/
hexagonal head bolt M6_25



1. Carefully go over all the mounting points and ensure they have been tightened.
2. Cut and fit factory inner guard lining to the wing bash plates and fix in place.

For more information check out www.rockarmor.com.au and watch our YouTube installation video.